

Instructions for using the Flowermate Slick Vaporizer



Flowermate Vaporizer Technology

Introduction

The Slick vaporizer from Flowermate is the slimmest and sleekest dry vaporizer in the Flowermate line of vaporizers. Vaporizer Slick is very easy to use and has three preset temperature modes: 196, 205 and 215 degrees Celsius, the tactile connection in the form of vibration, which notifies you that the device is ready for use. Its black ceramic chamber holds up to 0.4 grams of substance. The device is also equipped with a mouthpiece made of borosilicate glass. An insulated duct runs from the top air intake ports to ensure clean flavor and cool vapors with each puff. You can remove and replace the battery by simply unscrewing the bottom cover of the device. Try the new Slick vaporizer to see the performance of the Flowermate line of devices.

Package Contents

Vaporizer of dry substances Slick - 1 pc.

High-current battery 18650 2500 mAh - 1 pc.

Chamber for concentrated substances with organic cotton insert - 1 pc.

Micro USB cable - 1 pc.

Stainless steel chamber filter - 5 pcs.

Filter for stainless steel mouthpiece - 5 pcs.


Filling and loosening device - 1 pc.

Cleaning brush - 1 pc.

Stainless steel container - 1 pc.

Warranty information card - 1 pc.

User manual - 1 pc.

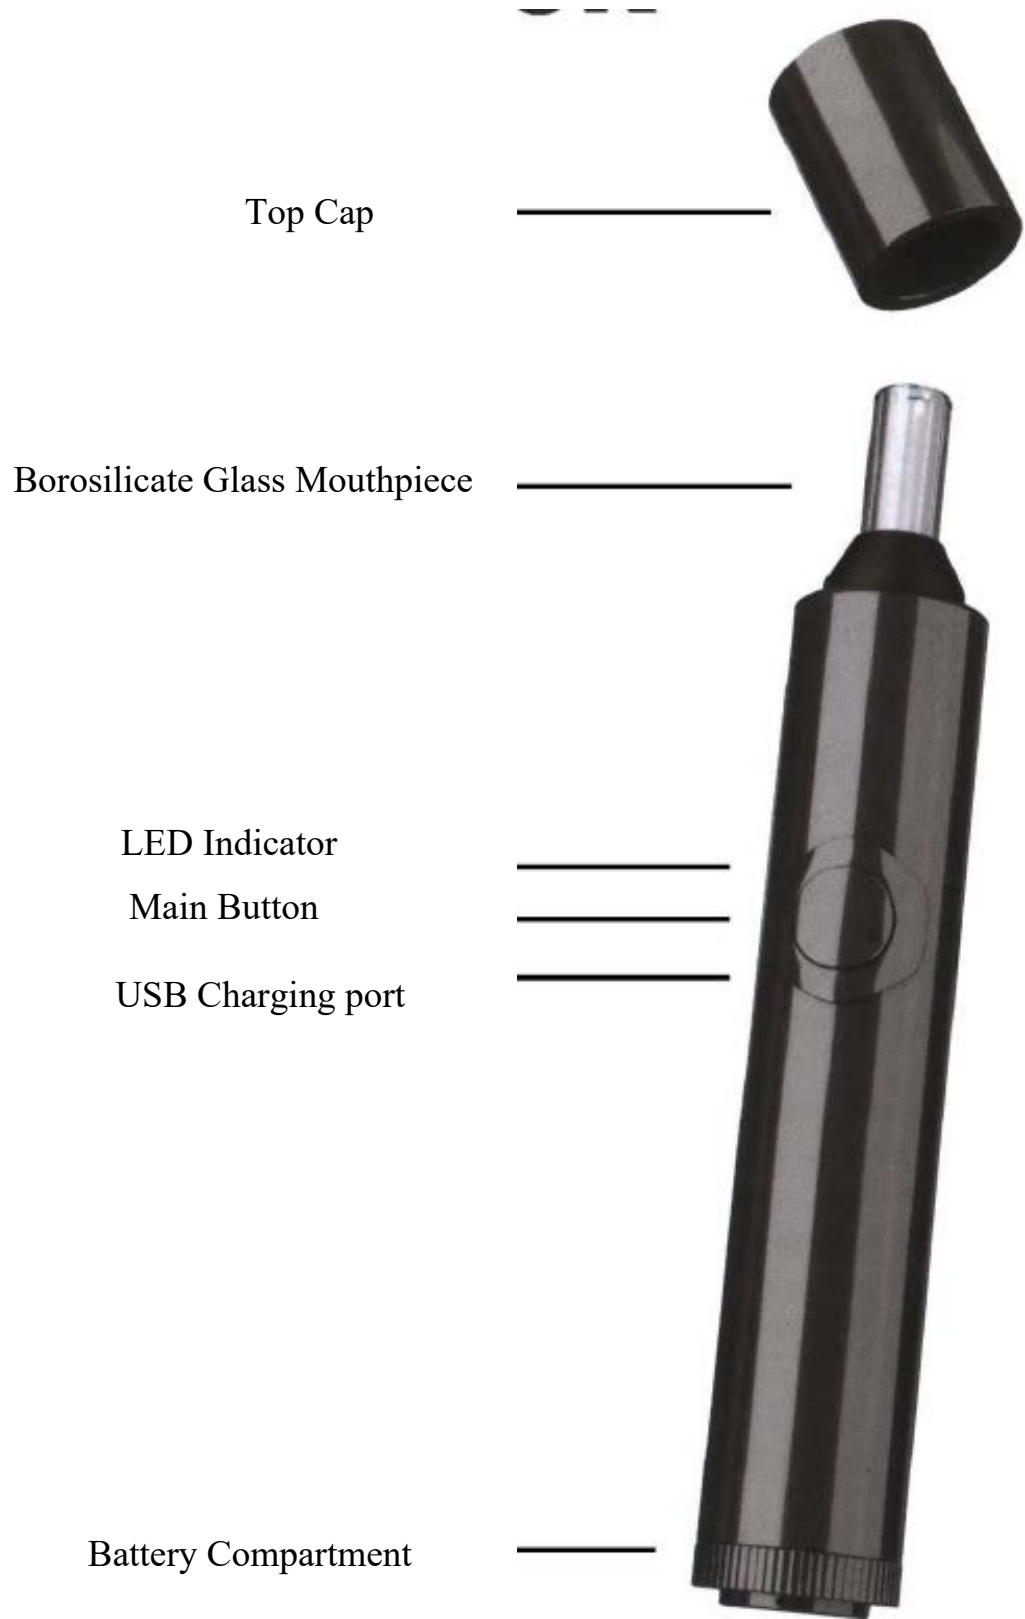

Preparing the Slick Vaporizer Before First Use

1. Before using the Slick vaporizer for the first time, unscrew the bottom cover and remove the insulator gasket, then screw the cover back on tightly. The battery will be ready to use.
2. Remove the top cover and place it over the bottom cover. The top cover can be put on top of the bottom cover to avoid losing it.
3. Remove the mouthpiece to gain access to the heating chamber and fill it with dry substance or insert the concentrated substance chamber.
4. Turn the device on by quickly pressing the power button five times and set the temperature by quickly pressing the power button three times. Enjoy the performance of the Slick vaporizer from Flowermate.

How to turn the device on and off

1. To turn the Slick vaporizer on or off, quickly press the power button five times. The device will vibrate twice when turned on or off.
2. Once you have filled the device with the substance, press and hold the power button to start the heating cycle.

Note: The device will vibrate for 2 seconds when the set temperature is reached.

3. After five minutes of use, the Slick vaporizer will vibrate for two seconds and then go into sleep mode.

How to fill a chamber with a dry substance

1. Before you fill the chamber with the dry substance, remove the top cover of the Slick vaporizer and put it on the bottom one.
2. Remove the mouthpiece to gain access to the heating chamber.
3. Chop the substance to medium and fill the stainless steel container that comes with it.

4. To fill the container, unscrew the lid and fill to your desired volume.
5. After you fill the container, close the lid and insert it into the heating chamber of the Slick vaporizer.
6. Close the chamber with the mouthpiece, turn on the device by quick five times pressing the power button. Set the desired temperature by quickly pressing the power button three times to switch from one mode to another.

How to fill a heating chamber with concentrated or oily substances


Before filling the chamber of your Slick Vaporizer with concentrated or oily substances, remove the top cover of your Slick Vaporizer and put it over the bottom cover. After that, remove the mouthpiece to gain access to the heating chamber.

Oily substance

1. Use the enclosed concentrated substance chamber to enjoy the vapors of the oily substance.
2. Put at least 5 drops (0.2 - 0.3 ml) of the substance on the camera pad. Wait a few seconds to allow the substance to spread on the pad.
3. Place the concentrated substance chamber in the heating chamber and put on the mouthpiece.
4. Turn on the device by quickly pressing the power button five times. Set the desired temperature by quickly pressing the power button three times to switch from one mode to the other.
5. It is recommended to use the highest temperature to evaporate oily substances.

Concentrates

1. Use the included concentrate chamber to enjoy concentrate vapors.

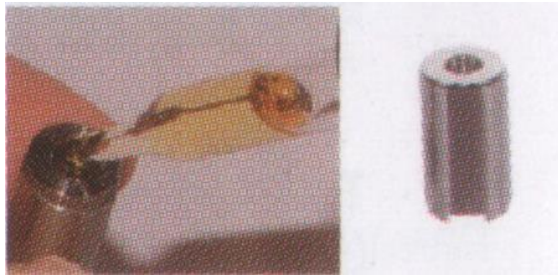

2. Unscrew the lid of the concentrate chamber and place the concentrate in the recess in the lid. The cotton will act as an absorbent swab for the heated concentrate.
3. Place the concentrated substance chamber in the heating chamber with the lid facing down and put the mouthpiece on.



4. Turn on the device by quickly pressing the power button five times. Set the desired temperature by quickly pressing the power button three times to switch from one mode to the other.

Note: Do not fill the camera while the unit is on.

Temperature setting

The Slick vaporizer has three temperature settings. Each of them is designed for five minutes of operation.

Correspondence of the LED colors to the modes:

- Level One: Blue LED = 196 degrees Celsius
- Second level: green LED color = 205 degrees Celsius
- Level 3: Red LED = 215 degrees Celsius

How to set the temperature level during device heating

1. Press the power button three times within 1.5 seconds to increase the temperature level. The unit will return to the lowest temperature level after the third temperature level.

Transition from level to level is as follows: Example: 1->2->3->1->2-

>3

2. The LED will flash every two seconds while the unit is heating. When the set temperature level is reached, the LED will stop flashing and turn a steady light.

How to stop the heating process and turn off the device

1. Press and hold the power button for two seconds to stop the heating process.
2. Quickly press the power button five times to turn off the device.

How to clean the device

1. It is very important to keep the unit clean in order for it to work properly. The best way to do this is to clean the unit after each use to avoid tarring.
2. Keep in mind that the stainless steel container and the concentrated substance chamber will be very hot after use.
3. It is best to place the container and the concentrated substance chamber on a heat-resistant surface.

You can clean the container and the concentrated substance chamber with alcohol wipes, but be sure to dry and burn off any alcohol residue from them before using them.

4. The mouthpiece can be cleaned using alcohol wipes, warm water, or simply soaking it in isopropyl alcohol. Remember to rinse it well and burn off any residual alcohol before using it.

Battery and Charger

Specifications

- Micro USB charger with five pins
- Charging voltage: 5 V, constant current
- Charging current: 800 - 1000 mAh

How to charge the Slick vaporizer battery

To charge the Slick Vaporizer battery, plug the included USB cable into the socket on the device. The LED indicator will glow red while charging and turn green when charging is complete.

Removing and replacing the battery

1. Find the battery cover on the bottom of the Slick vaporizer. Unscrew the cover.
2. You can now remove, replace or insert the battery. Note: The battery must be inserted with the positive contact facing forward.
3. After you have inserted the battery, screw on the battery compartment cover.

Precautions for working with the battery

- Do not use the Slick vaporizer while it is charging - it will damage the device.
- To prevent the device from overheating, do not leave the vaporizer charging overnight.
- Do not leave the charger plugged in unattended.
- Do not charge the device on a carpet or rug.
- Do not overcharge the battery. Do not short-circuit the battery terminals.

Battery recycling

Dispose of batteries properly. Do not dispose of batteries in the trash.

Security measures

Protection against reverse polarity

If you insert the battery incorrectly, it will not burn out the circuit. There will be no LED indication if the battery is incorrectly inserted.

Protection against overheating

If the ceramic heating chamber begins to overheat severely, the device will stop heating. The LED indicator light will turn red and blink six times.

Short circuit protection

In the event of a short circuit, the device will stop heating. The LED indicator will turn red and flash three times.

Thermal sensor short circuit protection

If the unit does not detect the thermal sensor or the sensor shuts down, the unit will stop heating. The LED light will turn red and blink six times.

Low battery protection

If the battery voltage drops below 3.3 V, the device will stop working until you recharge the battery.

Precautions

- Do not use the device in extreme environmental conditions, such as high temperatures or high humidity. Avoid contact with liquids.
- Do not use the device in high temperatures, near a naked flame, or in direct sunlight. Doing so may cause the device to overheat and catch fire. The performance of the device may also be impaired.
- If there is an unpleasant odor, deformation, overheating, loss of color, or other abnormal signs, stop using the device. If the device is charging, unplug it from the charger and do not use it.
- Do not use a defective adapter to charge your Slick vaporizer or any other manufacturer's charging adapters. Unsuitable adapters may deliver a different voltage, which could cause a fire. Use only the adapter that comes with the device. Failure to comply with these conditions will void Flowermate Technology's warranty.
- Take precautions when using the Slick vaporizer, the ceramic chamber and surrounding surfaces are very hot when the device is in operation.
- Conditions of use: relative dryness of air at a temperature of 10 to 40 degrees Celsius.

- Do not use at high temperatures, high humidity, strong magnetic or electric fields.
- Clean the Slick vaporizer only in accordance with the instructions provided by Flowermate Technology Ltd.
- Do not attempt to repair or modify the Slick vaporizer yourself.
- Do not leave the device on or unattended when not in use.

Warning

Failure to follow these safety instructions may result in injury or damage. The user of the device assumes all responsibility for the risks involved. Neither Flowermate Technology Ltd. nor the distributors of its products accept any responsibility for the use or misuse of the product. All Flowermate Technology products are intended for use by adults only. Please retain these instructions for future reference.

Explanatory Note

This device is designed as a pocket-sized device for aromatherapy enthusiasts and should only be used as intended to vaporize dry substances. The device is not intended for the consumption of illegal substances.

Warnings

- **Do not drop, crush, kink, puncture or set Slick vaporizer on fire. Do not heat it in the microwave oven. Do not scratch, paint or insert foreign objects into Slick Vaporizer.**
- **Do not place Slick vaporizer in microwave ovens, high pressure chambers or water.**
- **Keep the device out of the reach of children.**

- **Do not use the Slick vaporizer while it is charging - it will damage the device.**
- **To prevent the device from overheating, do not leave it connected to the charger overnight.**
- **Do not charge the device on a carpet or rug.**
- **Do not overcharge the battery.**
- **Do not short-circuit the battery terminals.**

Battery recycling

Dispose of batteries properly. Do not dispose of batteries in the trash.

1 year limited warranty

Flowermate Technology, LLC warrants this product to be free from defects in materials and workmanship and to operate normally for a period of one (1) year from the date of purchase by the first purchaser under normal use. The original receipt must be presented for warranty service. The one (1) year limited warranty covers the electronics, ceramic heating chamber and optional parts. The 2500 mAh high-current 18650 battery is warranted for ninety (90) days. If any defect should occur during the warranty period and a claim is made, Flowermate Technology Ltd. reserves the right:

- To correct this defect
- Replace with the same or equivalent product with a new warranty, or
- Reimbursement of the purchase price of the device.

*Please note that refunds are only available if you purchase the product directly from Flowermate.com online store

Exceptions and limitations

The limited warranty applies only to Flowermate Technology Ltd. products, which can be clearly distinguished by the Flowermate Technology Ltd. marking on the device. The warranty does not apply to products of other companies. This warranty does not cover 1) accidental damage caused to the product, damage caused by rough or improper use of the product, damage caused by flood, fire, earthquake, pirate attack and other damage caused by external forces, 2) damage caused by using the product contrary to the instructions of Flowermate Technology Ltd, 3) the device or parts thereof that have been modified without the written permission of Flowermate Technology LLC, 4) cosmetic damage, which includes but is not limited to damage due to teeth, scratches, cracks and fractures in the plastic.

This warranty is only valid for the first purchaser and is not transferable upon resale of the unit. The warranty of Flowermate Technology Ltd. applies only to devices purchased directly from Flowermate Technology Ltd. or their authorized representatives.

To learn more about official representatives and additional warranty details, please [visit www.flowermate.com](http://www.flowermate.com)



EST. 2016

CANATURA

HEMP  LIFE

Canatura - Online store with the best
hemp products for your health

www.canatura.com/en

Copyright reserved